

AIR FILTER CLEANING INSTRUCTIONS



REMOVE THE AIR FILTER FROM THE HOUSING - PLEASE REFER TO THE FILTER REMOVAL GUIDE IN THE DOWNLOAD SECTION OF OUR WEBSITE



USE COMPRESSED AIR ON THE CLEAN SIDE OF THE FILTER TO BLOW DIRT OFF THE DIRTY SIDE



APPLY AN EVEN COAT OF THE **AIR FILTER CLEANER** TO BOTH SIDES - PLEASE NOTE: THIS SOLUTION IS DEVELOPED SPECIALLY FOR THIS PURPOSE. UNAPPROVED SOLVENTS MAY CAUSE DAMAGE TO THE FILTER ELEMENT



ALLOW THE CLEANER TO ABSORB INTO THE FILTER, THEN USE COMPRESSED AIR TO REMOVE. REPEAT AS NECESSARY UNTIL THE FILTER IS CLEAN, THEN ALLOW TO DRY



AIR FILTER SERVICE OIL: THIS STEP IS NOT NECESSARY AS THE FILTERS ARE DESIGNED TO BE DRY. HOWEVER, IF YOUR INTAKE DOES NOT HAVE A MASS AIRFLOW SENSOR, A SMALL AMOUNT OF OIL CAN BE USED. APPLY ONE COAT OF THE OIL TO THE OUTSIDE, COVERING EACH PLEAT EVENLY. ALLOW TO ABSORB FOR AT LEAST 10 MINUTES.



RE-INSTALL THE AIR FILTER IN THE HOUSING. ENSURE THE HOUSING IS SECURELY FASTENED BEFORE STARTING THE VEHICLE