


1. If you have this type of filter housing where there are 6 screws in the front face (with or without a bracket) then you have a Filter called a "190 Filter". Please follow these steps for replacement.




2. If there is a bracket attached – make note of the position of this bracket with respect to the Eventuri Badge. Take a photo for easy reference. You will need to reinstall the bracket in the same position.

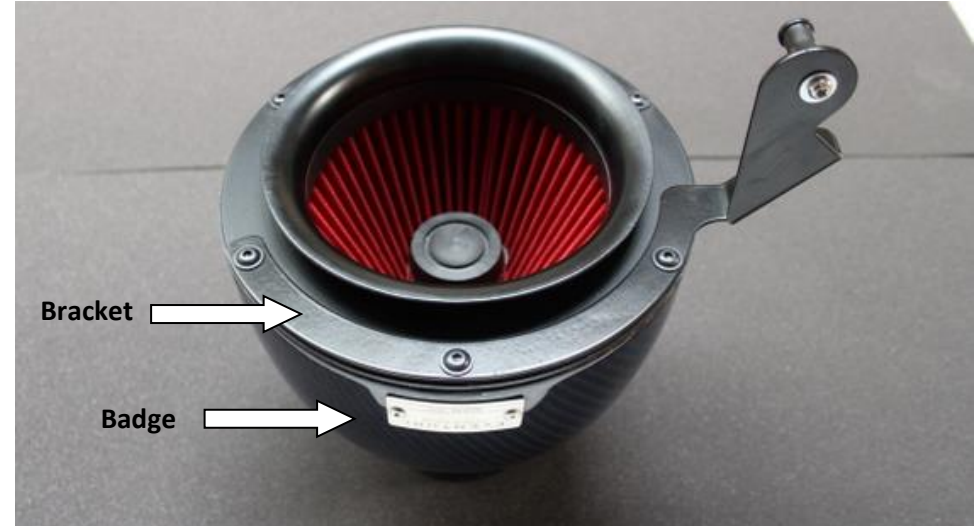

3. Remove all screws.




4. Remove the bracket and the cowl.

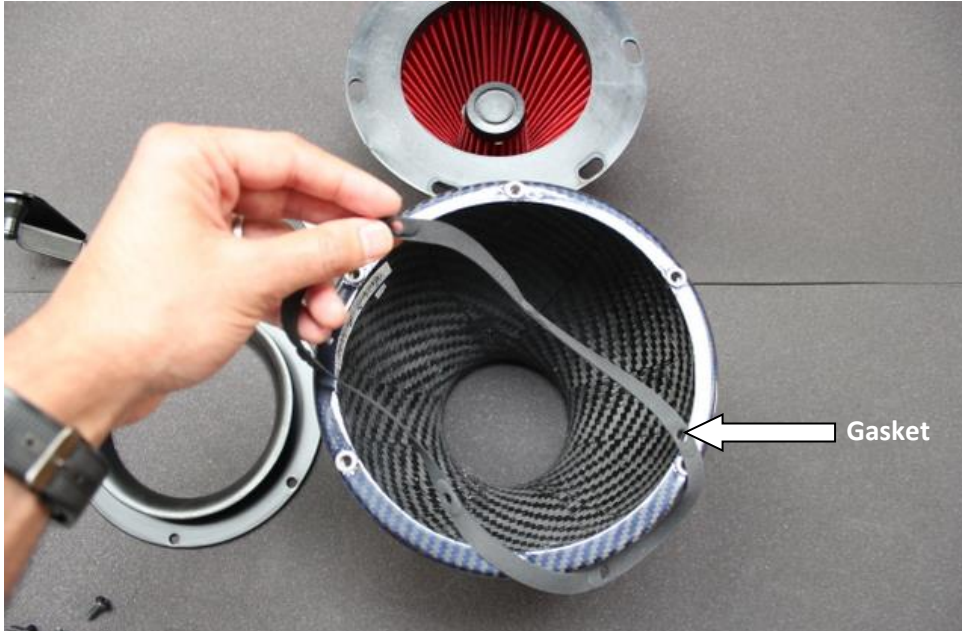

5. Remove the filter – you will see the old gasket on the carbon housing. Remove this also.



6. Place new gasket around the new filter – line up the holes with the filter holes.

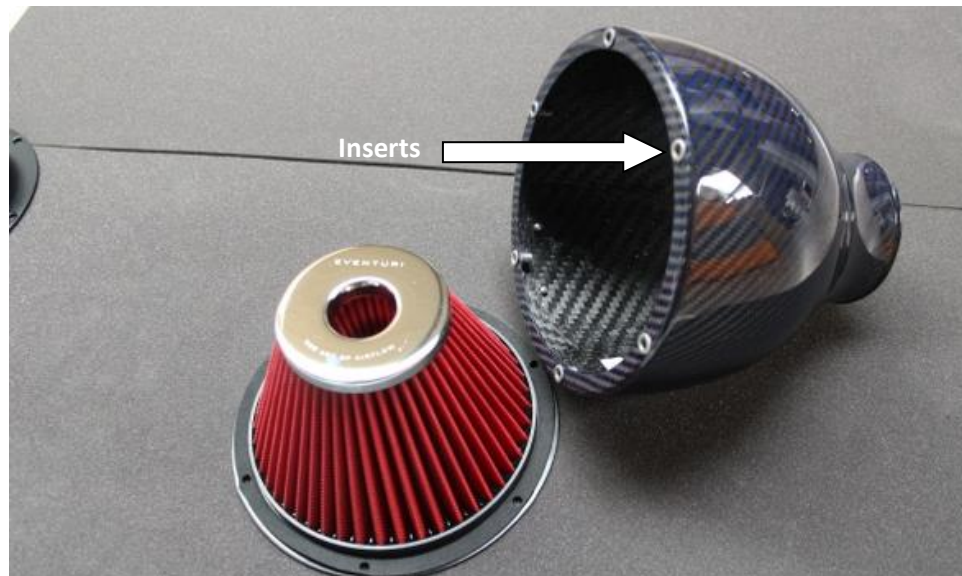

7. Now we will insert the housing over the filter – line up the inserts on the carbon housing with the holes in the filter.



8. Line up and place carbon housing over filter.





9. Turn over and ensure holes are lined up – if gasket slightly overlaps the inserts on the carbon it is ok.



10. Place the Cowl and bracket back on the filter. Bracket must be IN THE SAME POSITION as it was originally.



11. Now insert and tighten all the screws, use a suitable screw retainer such as Loctite on the screws – do not over tighten.

12. Filter change is now complete.

The recommended cleaning interval for optimum performance is 5000Km. Filters can be cleaned with compressed air or with a cleaning kit available from your dealer.