




1. Remove the foam padding and 4 rubber mounts from the original cover and install into the carbon cover.



2. Carefully remove the badge from the original cover by bending back the tabs from underneath the cover. Push into the slots on the carbon cover and bend the tabs back in from underneath,

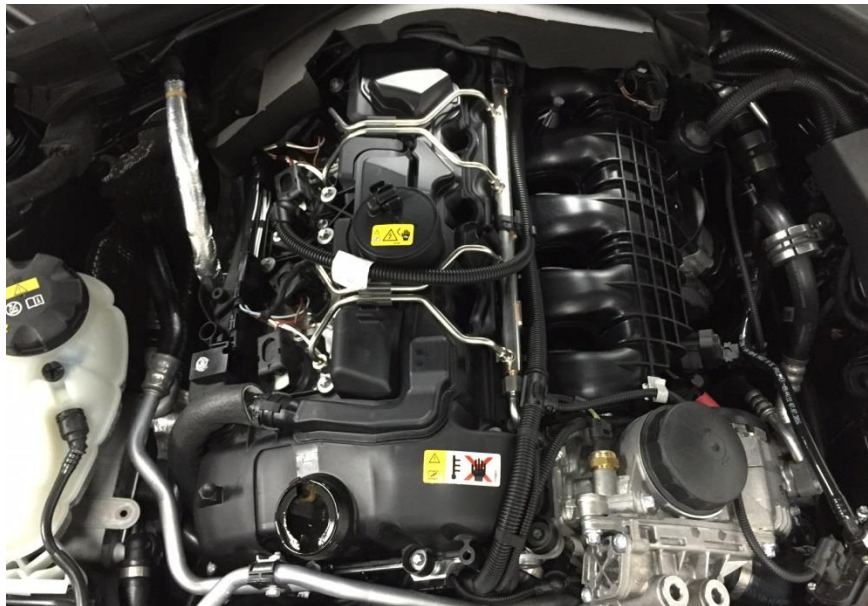

3. Remove the Oil Cap.



4. Push the right side down onto the 2 mounts first as shown by the arrows.



5. Now push the top left mount into place.



6. Finally push the remaining bottom left mount into place – you may need to push the cover to the right to line this one up.



7. Put the Oil Cap back on. Installation is complete.