




1. Identify the LHS and RHS filter housings.

F90 M5 Shroud Assembly




2. Identify the LHS and RHS Shrouds. LHS shroud has 2 cut-outs.

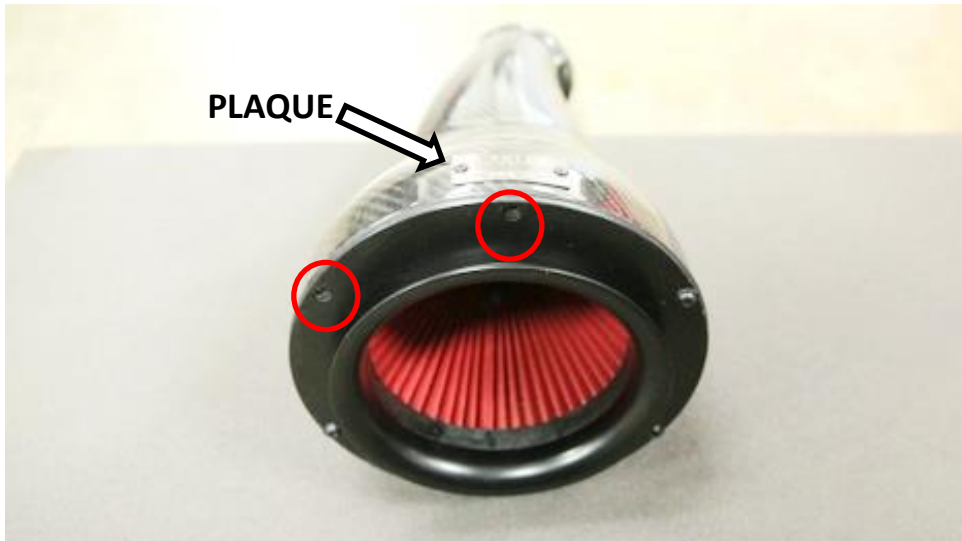

3. Take the LHS housing and remove the 2 screws circled in red with housing oriented showing the plaque on top.



4. Take the LHS Shroud and secure to the housing using the screws previously removed. Do not overtighten the screws.

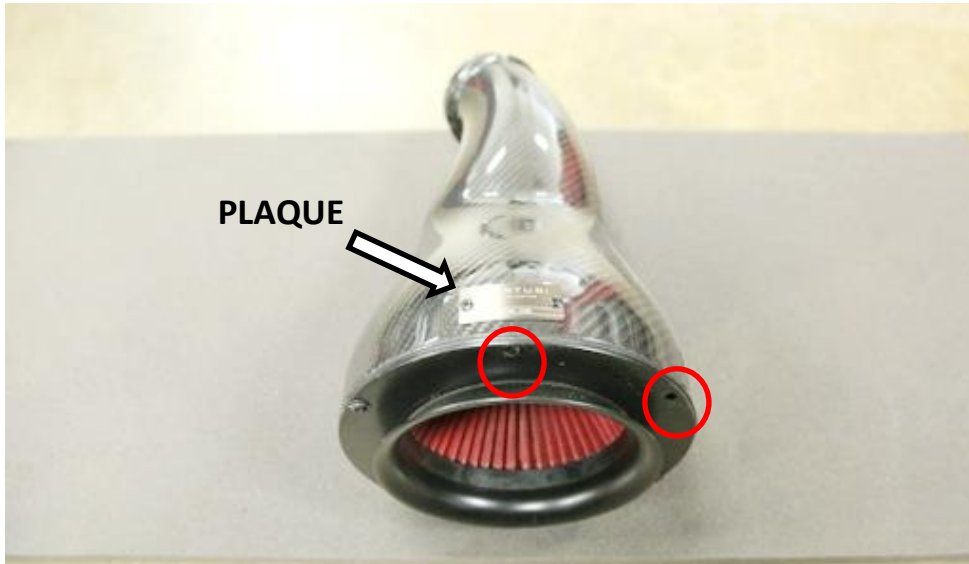

5. Take the RHS housing and remove the 2 screws circled in red with housing oriented showing the plaque on top.

F90 M5 Shroud Assembly



6. Take the RHS Shroud and secure to the housing using the screws previously removed. Do not overtighten the screws.



Shroud assembly has now been completed – please refer to the new V2 F90 M5 intake assembly instructions to complete the installation on the car.

This guide can be found on our website in the download section under BMW.